


To replace the O2 sensor:



Open the back door on the machine



On the side of the black box, there is a pop off cover- use a flathead screwdriver to remove.

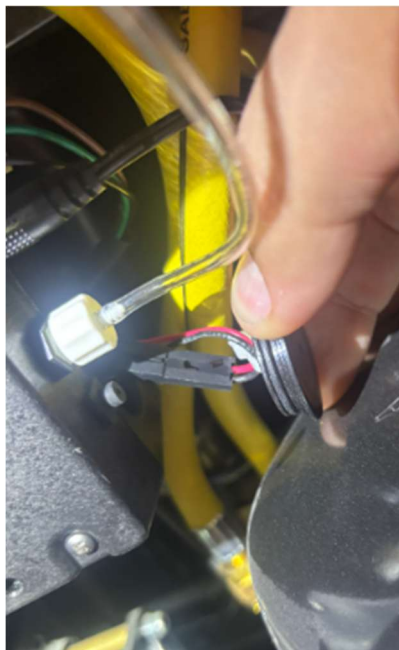

Use the flathead to unscrew the sensor, then pull it out gently as to not damage the wires.

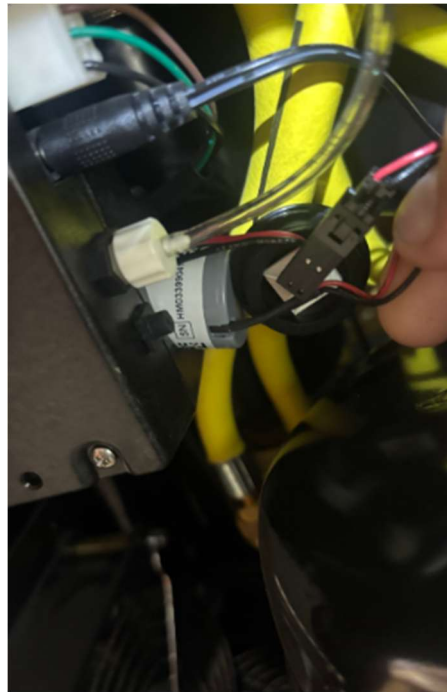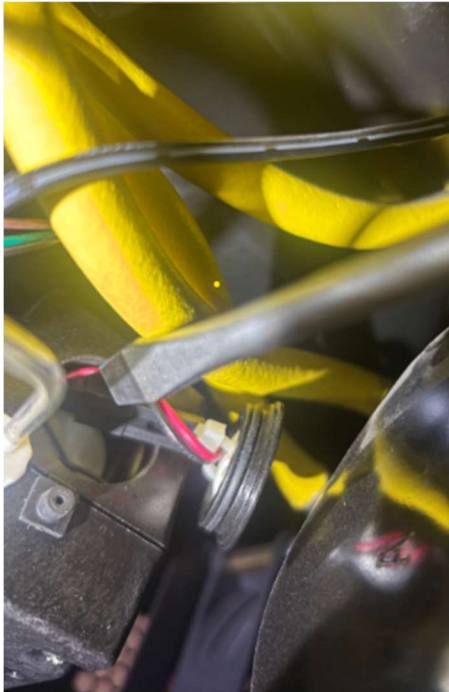


Unplug at the connection from the old sensor, then plug in the new sensor, screw it back in place and replace the cap.




To reset the counter:


Go to Settings

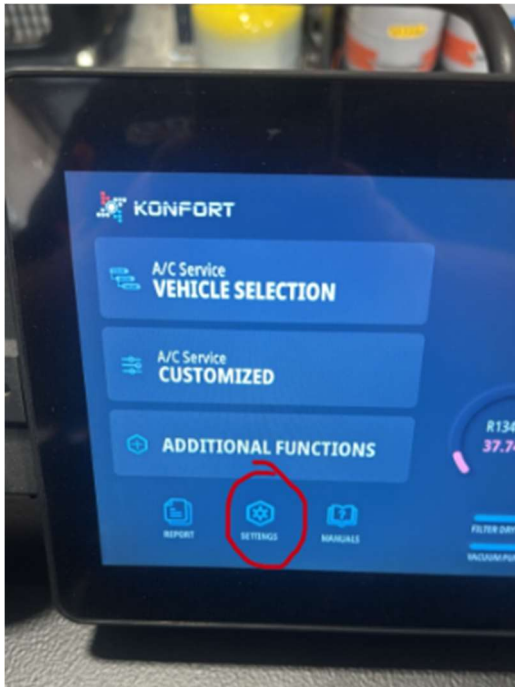

Scroll down

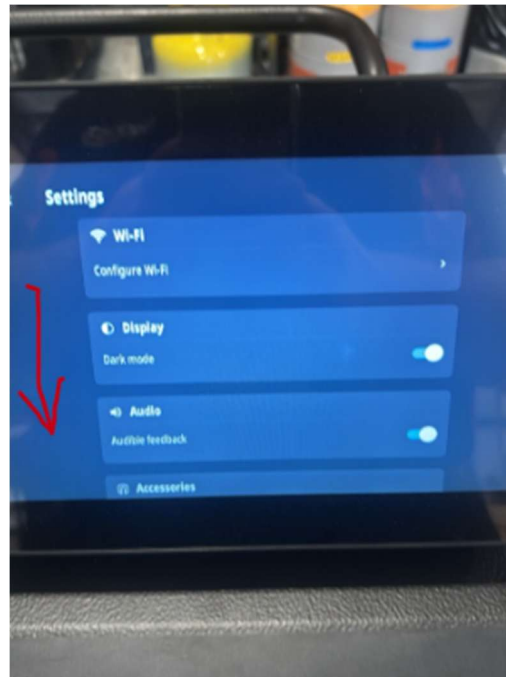

Select Refrigerant identifier settings

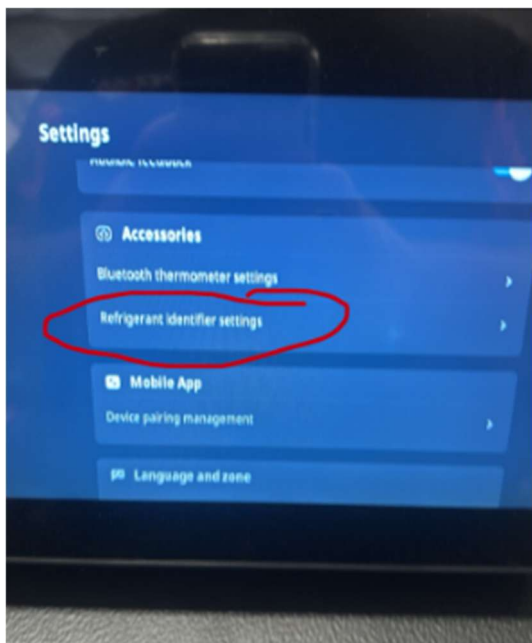

Click Sensor Replaced

