

**OEM**<sup>®</sup>  
Tools for Professionals

## Front Wheel Drive Hub Puller

**27037**

■ Used to remove the front hubs of FWD vehicles for wheel bearing replacement. Can also be used with a slide hammer to pull some rear axles.

**Note:** Always lubricate forcing screw before using tool.

1. Remove road wheel, brake caliper and brake rotor.
2. Remove hub nut.
3. Place puller over wheel bolts and replace wheel nuts securing puller.
4. Slowly begin tightening the forcing screw pulling hub from bearing.

**Caution:** Always wear safety glasses