

## Slide Hammer Bearing Puller Set 27085



## Slide Hammer Bearing Puller Set

Used to pull Pilot Bearing from end of crankshaft 27085

- 1. Remove pressure plate and clutch disc.
- 2. Make sure pulling adapter is fully threaded into slide hammer.
- 3. Insert puller jaws into and behind pilot bearing.
- 4. Expand jaws behind pilot bearing.
- 5. Using the slide hammer extract the bearing from crankshaft.
- 6. Install new pilot bearing.



Caution: Always wear safety glasses

MADE IN TAIWAN